


High Volume Water Heating (shown with 1-1/4" components)

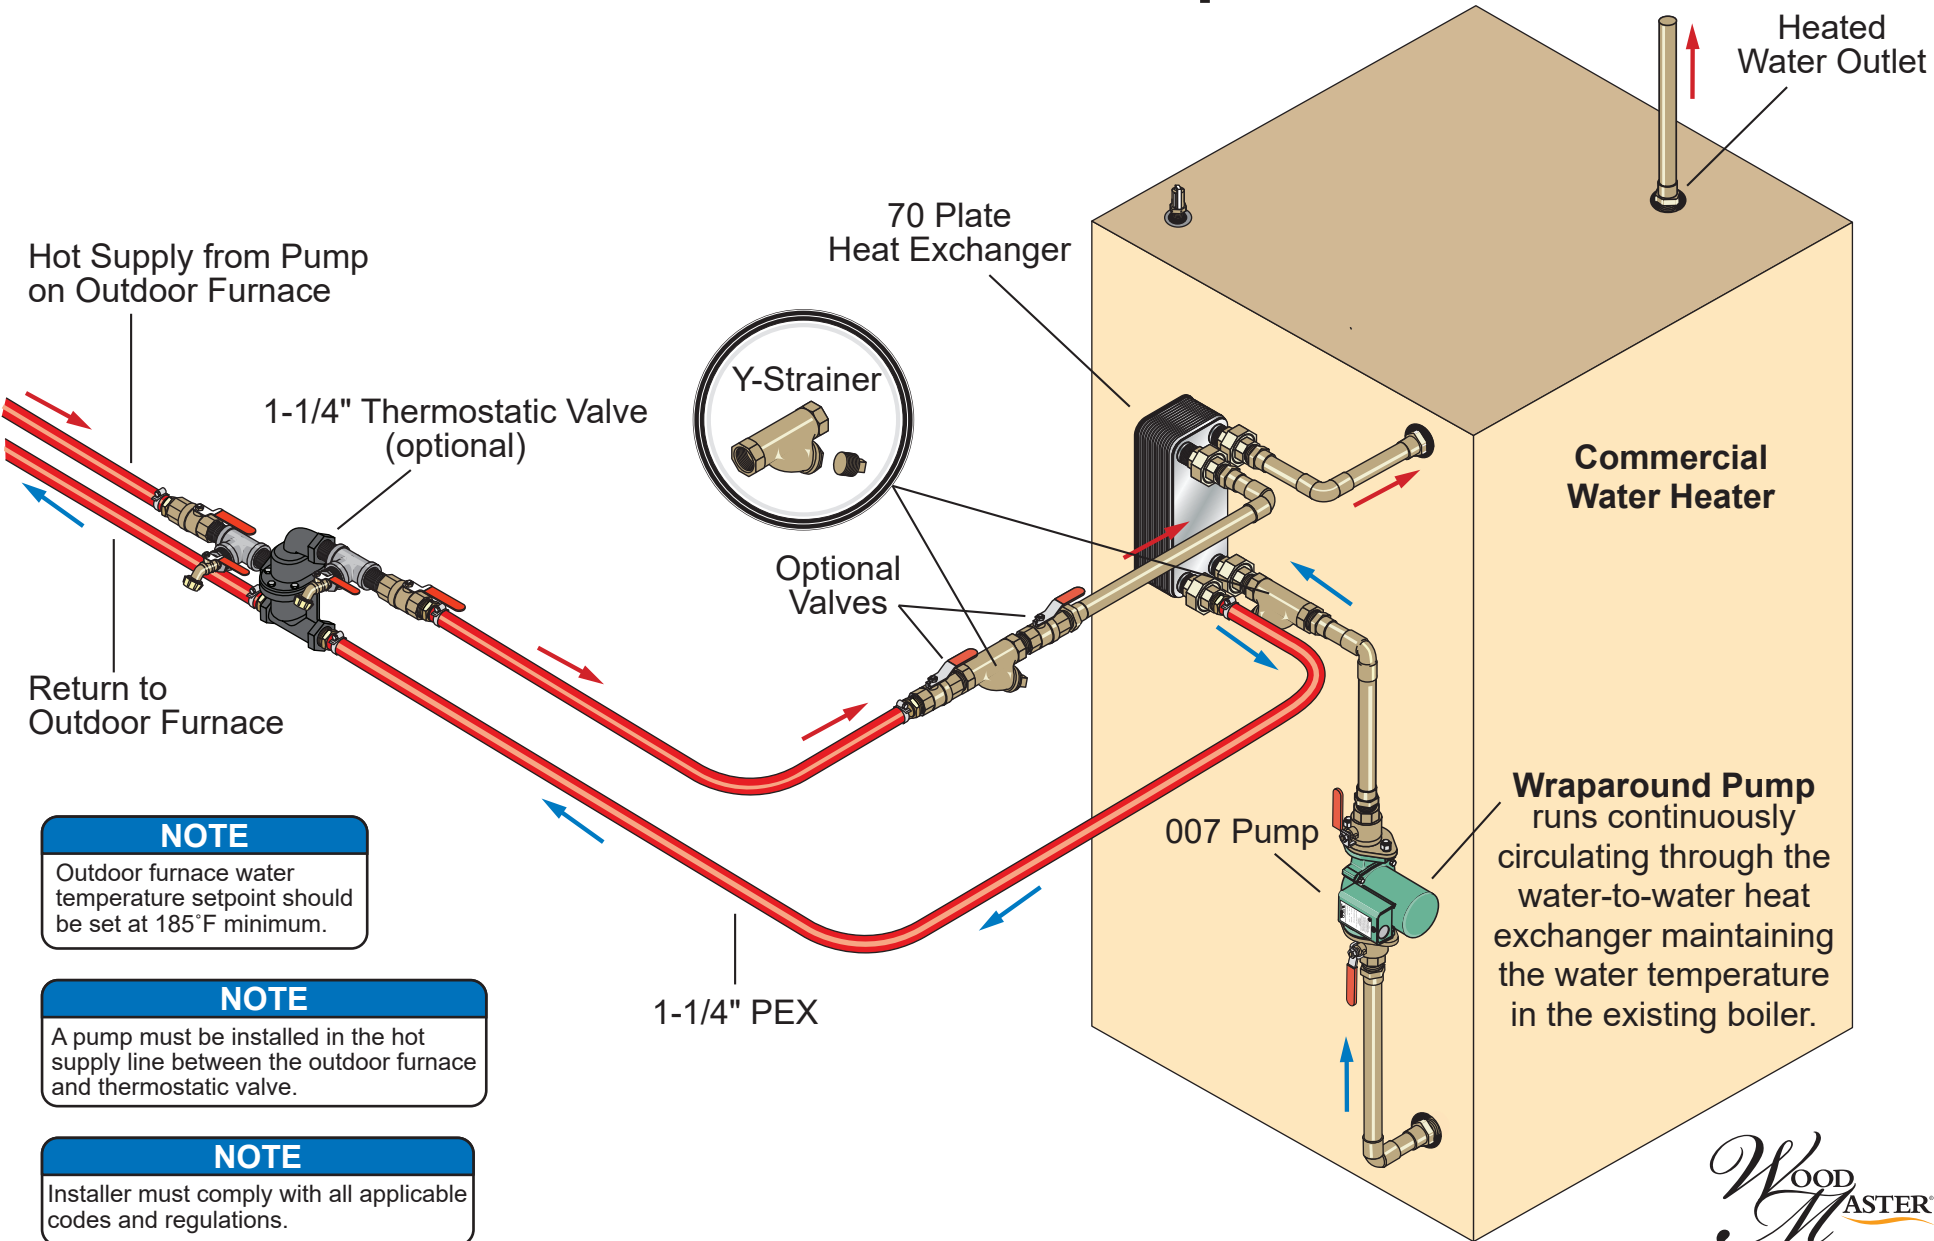

NOTE
Outdoor furnace water temperature setpoint should be set at 185°F minimum.

NOTE
A pump must be installed in the hot supply line between the outdoor furnace and thermostatic valve.

NOTE
Installer must comply with all applicable codes and regulations.

