



Outdoor Furnace and Forced Air Wiring Configuration with No Zone Valve

24-V Multi-stage Thermostat (p/n 587)

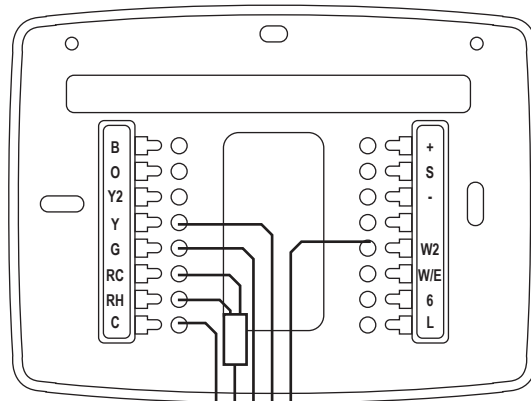

NOTE
 Change Installer Setup menu:
ITEM 2. to ELE to force thermostat to turn blower on.

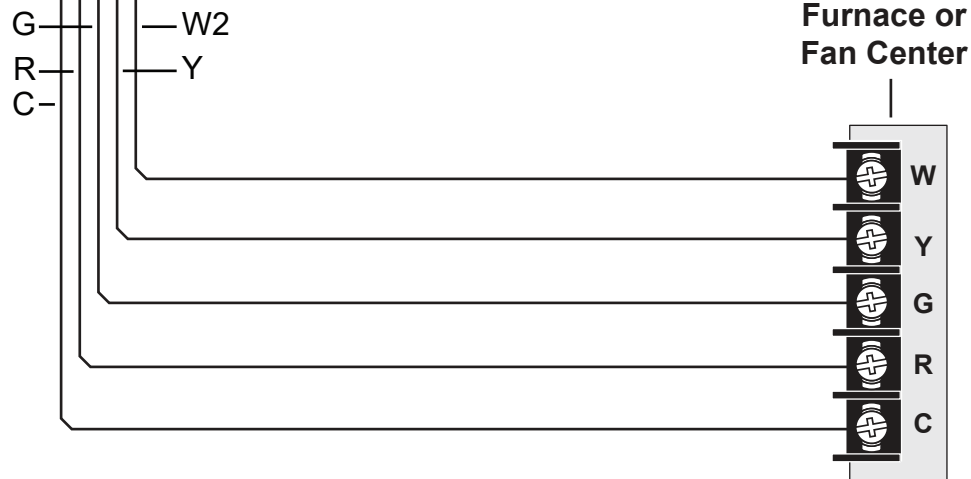

For illustration purposes only:
 • Location of thermostat may vary.
 • Not for heat pump application.

NOTE
 Thermostats must be installed by qualified technician.

